




## TEMPLATE

### TEMPLATE BITS

#### Ball Bearing Guide



PART #3012

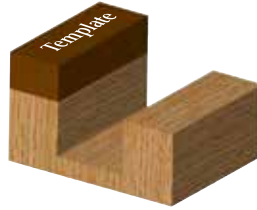

Part #	Cutting Dia.	Cutting Length	Overall Length	Bearing Number
<b>1/4" SHANK</b>				
* 3000A	1/2"	1/8"	1-3/4"	B9
* 3000	1/2"	1/4"	1-7/8"	B9
3001	1/2"	1/2"	2"	B9
3002	1/2"	3/4"	2-1/4"	B9
3004	1/2"	1"	2-1/2"	B9
* 3006	5/8"	1/4"	1-3/4"	B6
K41	5/8"	1/2"	2-1/4"	B6
K43	5/8"	3/4"	2-1/2"	B6
3008	5/8"	1"	2-1/2"	B6
* 3010	3/4"	1/4"	1-3/4"	B4
3012	3/4"	3/4"	2-3/8"	B4
3014	3/4"	1"	2-5/8"	B4
<b>3/8" SHANK</b>				
3015	7/8"	1"	2-5/8"	B12
<b>1/2" SHANK</b>				
3016	1-1/8"	1"	3"	B11
3018	1-1/8"	1-1/2"	3-1/2"	B11
3019	1-1/8"	2"	4"	B11
*** 3020	3/4"	1"	2-3/4"	*** B19
*** 3021	3/4"	1-1/4"	3"	*** B19
*** 3022	3/4"	1-1/2"	3-1/4"	*** B19
3022A	7/8"	1-1/2"	3-1/2"	B13
*** 3023	3/4"	2"	3-5/8"	*** B19

\* Dado clean out bits. Use to square the bottom of dado cuts made on a table saw.


\*\*\* Whiteside recommends using bits over 3/4" diameter in 1/2" shank whenever possible due to the fragile nature of the B19 bearing.

### TEMPLATE BITS

#### With Oversize Bearings



PART #3027

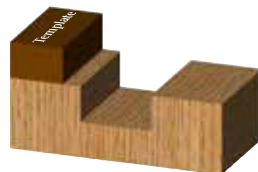

Part #	Cutting Dia.	Cutting Length	Overall Length	Bearing Diameter	Bearing Number
<b>1/4" SHANK</b>					
<sup>1</sup> 3025	5/16"	3/4"	2-3/4"	1/2"	B9
<sup>2</sup> 3027	1/2"	1/4"	1-7/8"	5/8"	B6
<sup>3</sup> 3028	1/2"	1/4"	1-7/8"	3/4"	B4
<sup>1,4</sup> 3032	9/16"	3/4"	2-1/4"	5/8"	B6

<sup>1</sup> For Porter-Cable Morten™, Mortise & Tenon Jig, and Omnijig® templates

<sup>2</sup> Porter-Cable Hinge Butt Mortise Bit

<sup>3</sup> For Hinge-Mate™ II Template

<sup>4</sup> Keller Box Joint Bit

## KEYHOLE

### KEYHOLE BITS




PART #3050

Part #	Large Dia.	Small Dia.	Cutting Length	Overall Length
<b>1/4" SHANK</b>				
3050	3/8"	3/16"	7/16"	1-1/2"
3052	1/2"	5/16"	7/16"	1-1/2"
<b>1/2" SHANK</b>				
3051	3/8"	3/16"	7/16"	2-1/8"
3053	1/2"	5/16"	7/16"	2-1/8"



## T-SLOT

### T-SLOT CUTTER

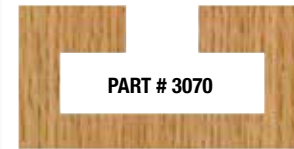

PART #3070

ACTUAL SIZE




PART #3075




PART #3075

Part #	Large Dia.	Small Dia.	"A" Length	"B" Depth	Overall Length
<b>1/2" SHANK</b>					
3070	1-1/16"	3/8"	5/16"	1/2"	2-3/8"
3075	1-3/16"	3/8"	1/4"	3/8"	2-3/8"

### SLOT & UNDERCUT BITS

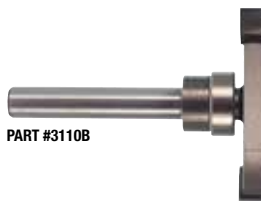

PART #3110B

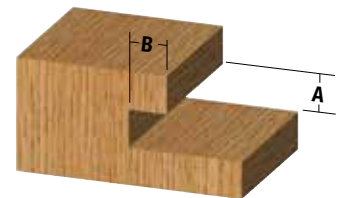

Used to cut all types of slots and grooves. Also used to undercut decorative patterns or large letters to give them a bold appearance.

Part #	Large Dia.	"A" Length	"B" Depth	Overall Length
<b>1/4" SHANK</b>				
3094	3/4"	1/8"	1/4"	1-7/8"
* 3094B	3/4"	1/8"	1/8"	1-7/8"
3098	1"	1/4"	3/8"	2"
* 3098B	1"	1/4"	1/4"	2"
3110	1-1/2"	1/4"	5/8"	2"
* 3110B	1-1/2"	1/4"	1/2"	2"

\* B denotes Bearing (B9) guide on shank.